



Domestic Appliances and Personal Care

Service Manual

MSH-coding 8824 865 00000

PRODUCT INFORMATION

Voltage	: 220 - 240 V
Frequency	: 50 Hz
Power consumption	: 1200 W
Coloursetting	: ivory with orange parts

REPAIR INSTRUCTION

1. Dismantling the toaster (Screws item 11)


To dismantle the toaster, four "Torx" screws T10 have to be unscrewed.

The required screwdriver can be ordered from Philips Consumer Service under number 4822 395 50449.


2. Lever knob unit (item 13)

To open the appliance, this knob has to be opened and removed first by twisting the lever straight at place A.

After the repair operation a new knob unit has to be fixed by twisting the lever back again.

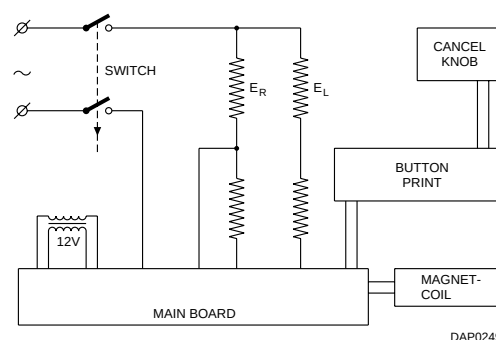

HD 4865/A

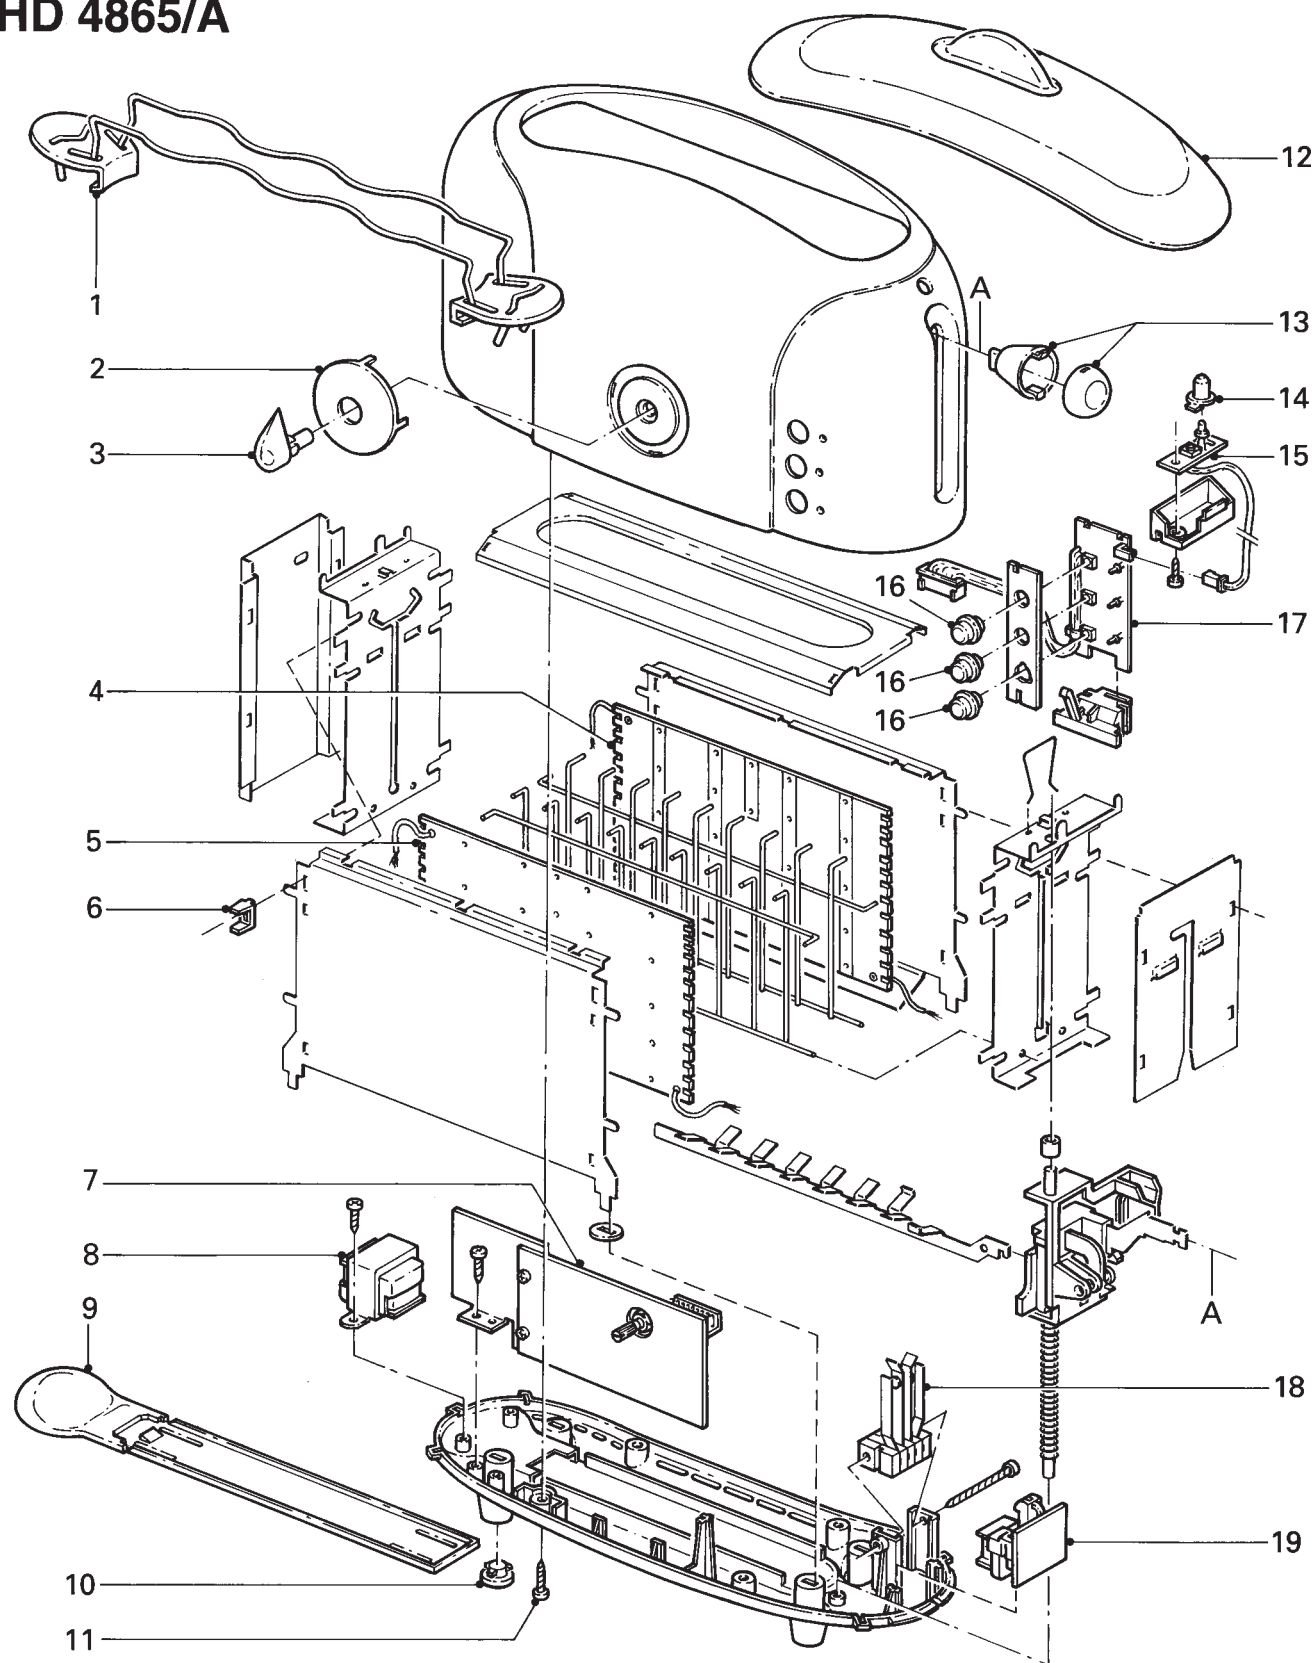

1	4822 256 10326	Bunwarmer	ivory
2	4822 454 13184	Dial panel	
3	4822 410 10902	Browning knob	orange
4	4822 259 10215	Element back	220-240 V
5	4822 259 10216	Element front	220-240 V
6	4822 532 12734	Distance piece	
7	4822 214 11991	Control unit	220-240 V
8	4822 146 10687	Trafo	220-240 V
9	4822 418 10215	Crumbtray	orange

10	4822 462 10838	Foot	
12	4822 442 00681	Dust cover	orange
13	4822 410 10917	Lever knob unit	orange
14	4822 410 10916	Cancel knob	orange
15	4822 214 12004	Cancel PCB	
16	4822 410 10915	Press button	orange
17	4822 214 12005	Control panel PCB	
18	4822 277 11663	Switch block	
19	4822 281 11079	Magnet unit	